

# Exchange Instructions

**GeBE**

Elektronik und  
Feinwerktechnik GmbH  
Module und Geräte zum Eingeben,  
Auswerten, Anzeigen und Ausdrucken  
analoger und digitaler Daten.


## GMT-4392

Lever for Easy-Load Thermal Printer  
GPT-4352

GeBE Document No.  
**MAN-E-447-V1.0**

Stand: 10.08.2002  
Gedruckt: 28.08.2002

German: MAN-D-446

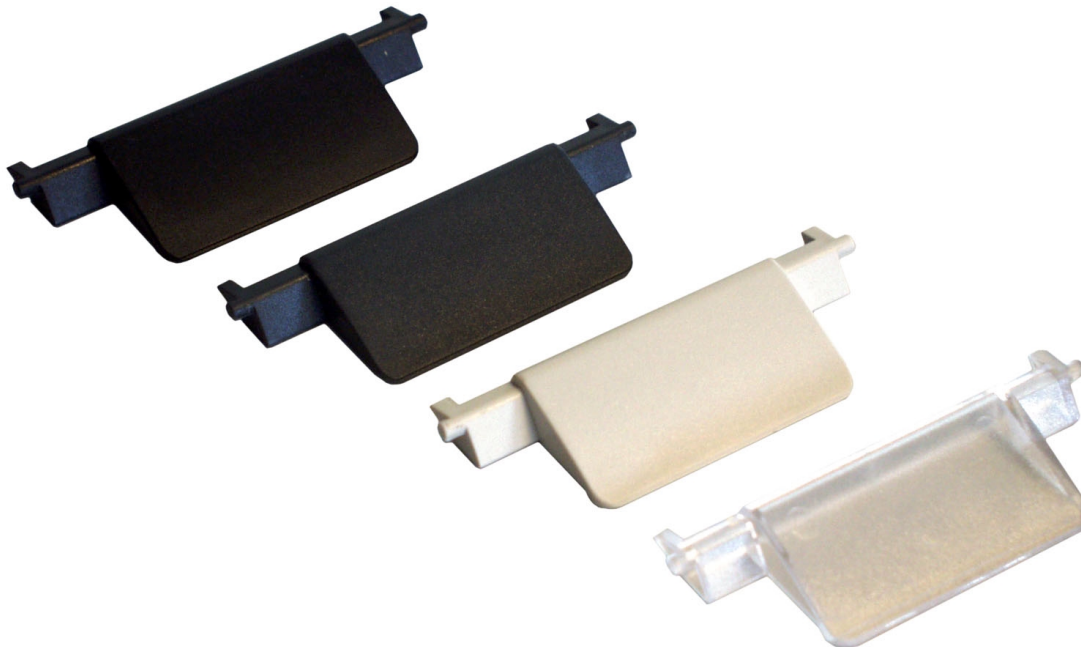

Errors and changes reserved.

### GeBE Elektronik und Feinwerktechnik GmbH

Beethovenstr. 15 • Germering • Germany • [www.oem-printer.com](http://www.oem-printer.com)  
Phone: ++49 (0) 89/894141-0 • Fax: ++49 (0) 89/8402168 • email: [sales.ef@gebe.net](mailto:sales.ef@gebe.net)

## 1. Complete Removal of Miniature Housing Lid

The lid of the printer can be completely removed by slightly lifting the lever inside the lid of the housing.

Pressure from the side will move the lid from its position, so you can remove the whole unit from the housing. This will make the exchange of the lever easier.


The best way is to remove one side from its seat, followed by the other.



## 2. Removal of Old Lever

Unclip the completely opened lever from its mount by applying slight pressure away from the print roll. You can either detach the seats simultaneously or one after the other.

Now you can remove the lever by moving it towards the inside of the lid through the opening.

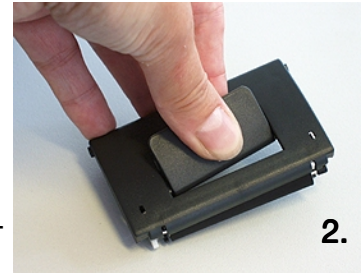

## 3. + 4. Inserting and Clipping in the Lever

From the inside of the lid, you now put the new lever through the opening.

Turn the lid over.

Move the completely opened lever steadily inside the opening towards the print roll, and press it into the seats.

You can either snap in the two sides simultaneously or one after the other.



## 5. Inserting the Complete Lid With the New Lever

Now take the complete lid and insert it from the top with slight pressure in the two mounts on the sides of the housing.

The best way to do this is to snap in one mount after the other, using the slopes at the short bearing bolts.

